

NC 385/04 Circuit Breakers

| No | Amps | Description | Cable | Battery | Note |
|-----|------|---------------------------------|-------|--------------------|------|
| F1 | 10 | Engine control | 2*1,5 | Start | |
| F2 | 10 | Engine start & shut down | 2*2,5 | Start | |
| F3 | 10 | Bilge pump | 3*1,5 | Acc. uninterrupted | |
| F4 | 10 | Radio memory back-up | 2*1,5 | Acc. uninterrupted | |
| F5 | 10 | Wipers | 2*1,5 | Accessory | |
| F6 | 10 | Navigation lights | 2*1,5 | Accessory | |
| | | Mast light | 2*1,5 | Accessory | |
| | | Anchor light | 2*1,5 | Accessory | |
| | | Tricolor light | 2*1,5 | Accessory | |
| F7 | 10 | Deck lights | 2*1,5 | Accessory | |
| | | Engine room lights | 2*1,5 | Accessory | |
| F8 | 10 | Horn | 2*1,5 | Accessory | |
| | | Deck hardware | 2*1,5 | Accessory | |
| F9 | 10 | Navigation instruments | 2*1,5 | Accessory | |
| | | Steering valve control | 2*1,5 | Accessory | |
| F10 | 10 | Fresh water pump | 3*1,5 | Accessory | |
| F11 | 10 | Sea water pump | 3*1,5 | Accessory | |
| F12 | 16 | Engine room blower (optional) | 2*2,5 | Accessory | |
| F13 | 10 | Defroster | 2*1,5 | Accessory | |
| F14 | 16 | Sockets 12 VDC | 2*2,5 | Accessory | |
| F15 | 10 | VHF | 2*1,5 | Accessory | |
| F16 | 10 | FM radio | 2*1,5 | Accessory | |
| F17 | 16 | Cooler | 2*6 | Accessory | |
| F18 | 20 | Heater | 2*6 | Accessory | |
| F19 | 20 | Autopilot, Seataalk instruments | 2*6 | Accessory | |
| F20 | 10 | Chartplotter (optional) | 2*1,5 | Accessory | |
| F21 | 10 | Cabin lights | 2*1,5 | Accessory | |
| | | Instrument lights | 2*1,5 | Accessory | |
| | | Compass light | 2*1,5 | Accessory | |
| F22 | 10 | Cabin lights | 2*1,5 | Accessory | |
| F23 | 10 | Cabin lights | 2*1,5 | Accessory | |
| F24 | 10 | Cabin lights | 2*1,5 | Accessory | |

Main fuses

| No | Amps | Description | Cable | Located in: |
|-----|------|--------------------|-------|--------------------|
| 1F1 | 80 | Distribution board | 2*25 | Main switch closet |